

DIAMView

Érvényes: 2025.02.01-től visszavonásig

SCADA Software, USB kulcsok

Típus	Hívjon!	Leírás
DIAM-000099UMA	T: 0620 400 1055	DIAMView SCADA optional package for OPC UA & Web API
DIAM-0001K00UPA	T: 0620 400 1055	SCADA UPGRADE 1000 TAG számra
DIAM-0003K00UPA	T: 0620 400 1055	SCADA UPGRADE 3000 TAG számra
DIAM-0005K00UPA	T: 0620 400 1055	SCADA UPGRADE TO 5000 TAGS
DIAM-0012800UPA	T: 0620 400 1055	SCADA UPGRADE 128 TAG számra
DIAM-001K500UPA	T: 0620 400 1055	SCADA UPGRADE 1500 TAG számra
DIAM-0025600UPA	T: 0620 400 1055	SCADA UPGRADE 256 TAG számra
DIAM-0051200UPA	T: 0620 400 1055	SCADA UPGRADE 512 TAG számra
DIAM-0099K00UPA	T: 0620 400 1055	SCADA UPGRADE korlátlan TAG számra
DIAM-0101K0000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, 1000 I/O pont, Dongle USB kulcs
DIAM-0103K0000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, 3000 I/O pont, Dongle USB kulcs
DIAM-0105K0000A	T: 0620 400 1055	DIAMView SCADA Standalone Version, 5000 I/O points, Dongle USB Key
DIAM-010640000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, 64 I/O pont, Dongle USB kulcs
DIAM-011280000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, 128 I/O pont, Dongle USB kulcs
DIAM-011K50000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, 1500 I/O pont, Dongle USB kulcs
DIAM-012560000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, 256 I/O pont, Dongle USB kulcs
DIAM-015120000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, 512 I/O pont, Dongle USB kulcs
DIAM-0199K0000A	T: 0620 400 1055	DIAMView SCADA Standalone verzió, korlátlan I/O pont, Dongle USB kulcs
DIAM-0201K0500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 1000 tags & 5 C/S , Watchdog USB kulcs
DIAM-0201K1000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 1000 tags & 10 C/S , Watchdog USB kulcs
DIAM-0203K0500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 3000 tags & 5 C/S , Watchdog USB kulcs
DIAM-0203K1000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 3000 tags & 10 C/S , Watchdog USB kulcs
DIAM-0205K0500A	T: 0620 400 1055	DIAMView SCADA C/S version, 5000 I/O tags & 5 C/S , Watchdog USB Key
DIAM-0205K1000A	T: 0620 400 1055	DIAMView SCADA C/S version, 5000 I/O tags & 10 C/S , Watchdog USB Key
DIAM-020640500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 64 tags & 5 C/S , Watchdog USB kulcs
DIAM-020641000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 64 tags & 10 C/S , Watchdog USB kulcs
DIAM-021280500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 128 tags & 5 C/S , Watchdog USB kulcs
DIAM-021281000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 128 tags & 10 C/S , Watchdog USB kulcs
DIAM-021K50500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 1500 tags & 5 C/S , Watchdog USB kulcs
DIAM-021K51000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 1500 tags & 10 C/S , Watchdog USB kulcs
DIAM-022560500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 256 tags & 5 C/S , Watchdog USB kulcs
DIAM-022561000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 256 tags & 10 C/S , Watchdog USB kulcs
DIAM-025120500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 512 tags & 5 C/S , Watchdog USB kulcs
DIAM-025121000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, 512 tags & 10 C/S , Watchdog USB kulcs
DIAM-0299K0500A	T: 0620 400 1055	DIAMView SCADA C/S verzió, korlátlan I/O tags & 5 C/S , Watchdog USB kulcs
DIAM-0299K1000A	T: 0620 400 1055	DIAMView SCADA C/S verzió, korlátlan I/O tags & 10 C/S , Watchdog USB kulcs
DIAM-0300005UPA	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - UPGRADE TO 5 CLIENT
DIAM-0300010UPA	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - UPGRADE TO 10 CLIENT
DIAM-0301K0500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - 1000 TAGS
DIAM-0301K1000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - 1000 TAGS
DIAM-0303K0500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - 3000 TAGS
DIAM-0303K1000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - 3000 TAGS
DIAM-0305K0500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB VERSION SCADA - 5 B/S CLIENT - 5000 TAGS
DIAM-0305K1000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB VERSION SCADA - 10 B/S CLIENT - 5000 TAGS
DIAM-030640500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - 64 TAGS
DIAM-030641000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - 64 TAGS
DIAM-031280500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - 128 TAGS
DIAM-031281000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - 128 TAGS
DIAM-031K50500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - 1500 TAGS
DIAM-031K51000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - 1500 TAGS
DIAM-032560500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - 256 TAGS
DIAM-032561000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - 256 TAGS
DIAM-035120500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - 512 TAGS
DIAM-035121000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - 512 TAGS
DIAM-0399K0500A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 5 B/S CLIENT - korlátlan TAGS
DIAM-0399K1000A	T: 0620 400 1055	INDUSTRY AUTOMATION WEB verzió SCADA - 10 B/S CLIENT - korlátlan TAGS

Process Automation

Note:

1. DIAView SCADA can be downloaded on Delta's website for free.
2. DIAView can work 2 hours continuously. After that, SCADA will be automatically disconnected.
If you do not have the above mentioned dongle tool, you will need to connect the communication again.

Minimum System requirements:

Configuration Items	Minimum System Requirements
CPU	2.0GHz or above
Memory	2GB or above
Hard disk	20GB or above
Display	1024 x 768 resolution or above
Operating System	Windows XP SP3, Windows 7 Professional/Ultimate Edition, Windows 8 Professional/Ultimate Edition 32/64 bit
	Language: Simplified Chinese, Traditional Chinese, English
System Privilege	Windows users must have administrator privileges
Execution Platform	Installation of Microsoft .NET Framework4.0 or above is required

※ **Note** : Users must prevent the computer system from entering standby or hibernation modes while the DIAView configuration software execution environment is executing in order to avoid "Unrecognized Encryption -dongle" anomalies from occurring.